



SERIAL NUMBER LOCATOR

The serial number can be found stamped on the housing of the unit. Depending on the model number, this serial number can be at different places. The serial number is a 8-digit number, except for the D20S model.

D20S (5-digit)



D1



D8R



D45RE



D25



D14



D07



DM11F



D128R

