



DOSATRON®

WATER POWERED DOSING TECHNOLOGY

INSTALLATION TIP



Upgrading from the D8R to the D8RE2 or D8RE5

Due to the different body styles on the D8R and the D8RE2/D8RE5, the width is different.

Here is an option for re-plumbing that isn't hard.


The pieces can easily be found at your local hardware store.

To make your own adapter, you need:

- A** 1.5" slip x 1.5" female NPT thread adapter
- B** Approximately 4.25" to 4.5" section of 1.5" PVC
- C** 1.5" slip x 1.5" male NPT thread adapter
- D** PVC glue

- Glue the piece of pipe **B** to the slip side of each fitting **A** and **C**.
- Wrap teflon tape onto the threaded part of the injector body.
- Screw the new adapter onto the injector body.


To order or for more information call **800-523-8499**.

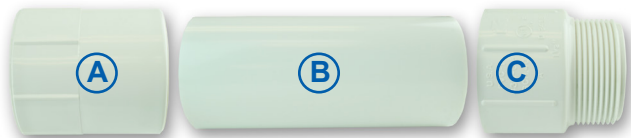

Kit Part #: 8P107



40 GPM - D8R

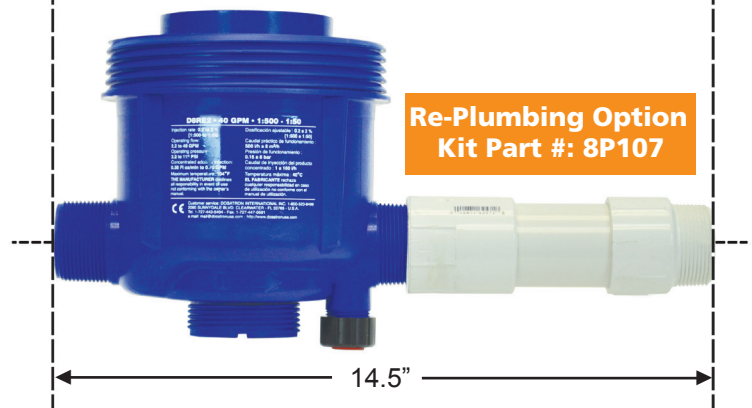

40 GPM - D8RE2
40 GPM - D8RE5

800-523-8499

www.dosatronusa.com