



DOSATRON®

WATER POWERED DOSING TECHNOLOGY

**Call Customer Service At
1-800-523-8499 To Order!**

**Dosatron maintains a fully stocked
inventory of parts and accessories.**

These are just a few of the items available for your model DI11...

Maintenance is important and can
prolong the use of your Dosatron!
In addition to the enclosed seal kit, a
complete Maintenance Kit is available.



DI11
Maintenance Kit
Part#: MKDI11

**Clean Water is Essential to the life
of your Dosatron!**

*A 200 mesh /80 micron filter should be
installed in front of your DI11. Filter Kit
comes complete with 3/4" hook ups.*



3/4" Filter
Part#: AKF5AP11KIT

Protect your Dosatron against harmful Back Flow (Water Hammer)!

A Check Valve or Union Ball Check should be installed directly after your DI11.



3/4" Check Valve
Part#: CV34



3/4" Union Ball Check
Part#: CVB34



Part# EDDI009

DI11-11GPM Injection Seal Kit

**Routine Maintenance once
a year will add to the life
of your Dosatron!
Register your unit at:
www.dosatronusa.com/pm**



KIT CONTENTS:

- 1 – J001 - Top seal
- 1 – JDI011 - Check valve seal
- 1 – JDI012 - Check valve barb O-ring
- 1 – MDI028 - Check valve spring
- 1 – PDI032 - Check valve cone

**Call 800-523-8499
For Technical Support**



DOSATRON®


WATER POWERED DOSING TECHNOLOGY

2090 Sunnydale Blvd. Clearwater, FL 33765 USA
Tel: 727-443-5404 www.dosatronusa.com

DI11 Injection Seal Kit Instructions

(Blue Part Number Denotes it is Part of the Kit)

1. Unscrew white hose nut (PDI038) and remove suction hose.
2. Unscrew injection stem (PDI153), pull down to expose plunger assembly.
3. Up inside body locate top seal (J001), remove and replace.
4. Unscrew check valve nut (PDI036), remove check valve assembly (PJDI001) from injection stem & disassemble.
5. Replace check valve barb o-ring (JDI012), check valve seal (JDI011), check valve cone (PDI032), check valve spring (MDI028).
6. Reassemble check valve assembly (PJDI001), insert back into injection stem, and screw check valve nut (PDI036) back on.
7. Place top seal (J001) on plunger assembly. (Raise Portion Of Seal Pointing Up).
8. Slide injection stem (PDI153) up over plunger assembly and tighten.
9. Reattach suction hose and tighten white hose nut (PDI038).

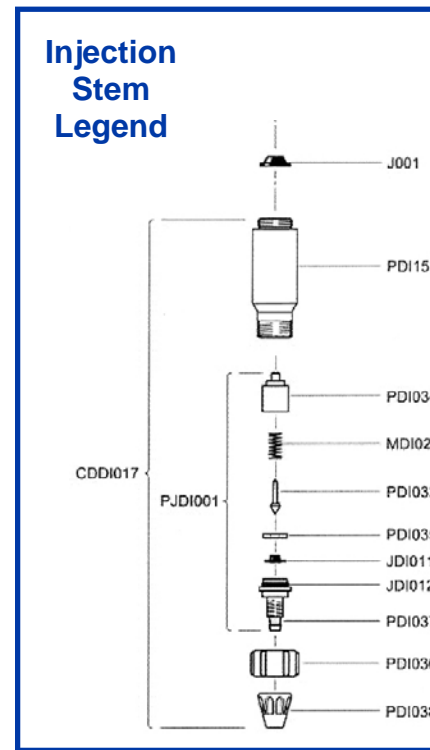

Call
800-523-8499
Or
727-443-5404
For Technical
Support

