






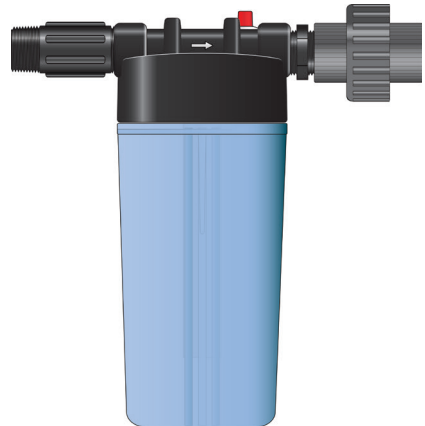
DOSATRON®

WATER POWERED DOSING TECHNOLOGY

Nutrient Delivery System Models

MODEL NUMBER	MODEL
D8RE3000VFBPHY	
D8RE2VFBPHY	
D8RE5VFBPHY	

Nutrient Delivery System



NOTE: Installation illustrations are to be used as a reference guide only.



DOSATRON®

WATER POWERED DOSING TECHNOLOGY

2090 Sunnysdale Blvd. • Clearwater, FL 33765
1-800-523-8499 • www.dosatronusa.com

Mixing Chamber Kit

Part #: HYKMC150


NDS
NUTRIENT DELIVERY SYSTEM

Mixing Chamber Kit

Step-by-Step Assembly Instructions

1

Wrap 5 to 6 turns of **Teflon® tape*** on all threads. Make sure to wrap tape clockwise to prevent from unravelling.



2

Install the **4" Nipple** to the inlet side of the **Mixing Chamber** (please note flow direction indicated by the arrow on the **Mixing Chamber**).



3

Install the **Close Nipple** to the outlet of the **Mixing Chamber** and add the **Union** to the other side of the **Close Nipple**.



Kit Includes:

- 1 - Mixing Chamber
- 1 - Union
- 1 - 4" Nipple
- 1 - Close Nipple
- 1 - Roll of pink Teflon® tape

Mixing Chamber Kit includes parts listed.
Dosatron injector sold separately.